

# BT02

## BATTERY & ALTERNATOR TESTER



### FEATURES

- For 12V Lead Acid batteries only
- Test the condition of your battery and alternator
- Control the right starting ability of your vehicle
- The ideal tool to control your battery

### ALTERNATOR CHECK

- Run the vehicle with all electrical equipment off (lights, radio...)
- Run the vehicle with all electrical equipment on (lights, radio...)
- The green LED should light on both tests meaning the alternator is GOOD
- A red LED indicates the alternator is over charging: must be controlled
- No LED light indicates the alternator may not be charging: must be controlled

### SUITABLE FOR



### INSTRUCTIONS

- Connect the Red crocodile clip to the Positive (+) battery terminal
- Connect the Black crocodile clip to the Negative (-) battery terminal

#### Battery check:

- Switch on the vehicle lights for 1-2 minutes
- Disconnect the battery from the vehicle
- Wait 10 minutes
- Connect the tester

### BATTERY COMPATIBILITY

