



INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO -
HINTERRADABDECKUNG FÜR

BMW R1150 GS - R1150 GS ADVENTURE

Ref.: 5886 J
(color negro/black colour)

Ref.: 5886 C
(color carbono/carbon look)

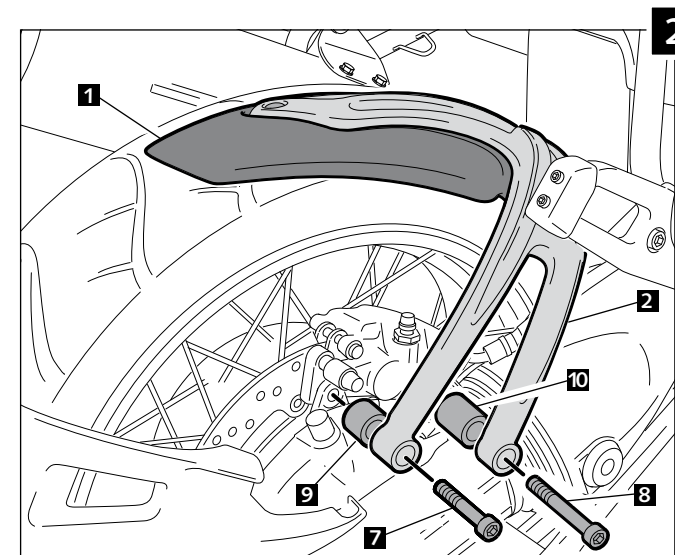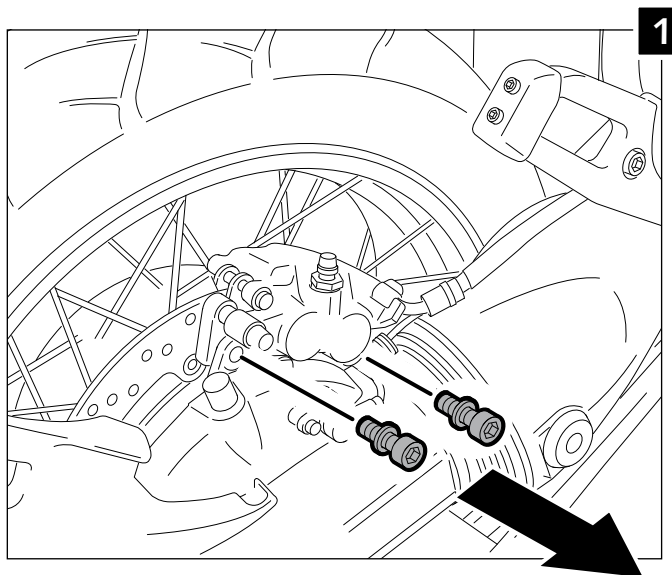

ID.		DESCRIPCIÓN	DESCRIPTION	QTY.
1		Guardabarros	Mudguard	1
2		Soporte	Support	1
3		Silemblock	Well nut	3
4		Tornillo Allen M5x11 ISO 7380 Autoblocante	M5x11 ISO 7380 Allen lock screw	3
5		Casquillo con valona M5	M5 bush with flange	3
6		Arandela glower DIN 127 M5	DIN 127 M5 glower washer	3
7		Tornillo Allen M10x60 DIN 912 12.9	M10x60 DIN 912 12.9 Allen screw	1
8		Tornillo Allen M10x75 DIN 912 12.9	M10x75 DIN 912 12.9 Allen screw	1
9		Casquillo aluminio Ø int. 10,5 x Ø ext. 22x26	Arrowhead aluminum Ø inner 10,5 x Ø outer 22x26	1
10		Casquillo aluminio Ø int. 10,5 x Ø ext. 22x34	Bush with fl ange Ø inner 10,5 x Ø outer 22x34	1
11		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	3

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - infousa@puig.tv

www.puig.tv - www.puigusa.com

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO - HINTERRADABDECKUNG FÜR BMW R1150 GS - R1150 GS ADVENTURE

