

# BMW

## F750GS/F800GS ADV/F850GS/F850GS ADV/S1000XR/ R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

### M O U N T I N G I N S T R U C T I O N S

REF 3763

ORIGINAL EXTENSION HANDGUARDS



1 Person



20 min



EASY



TORX  
T° 30



ALLEN  
N° 3



ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Extensión paramanos original derecho	Right original extension handguard	1	3763W/H/N/FM3
2		Extensión paramanos original izquierdo	Left original extension handguard	1	3763W/H/N/FM3
3		Soporte metálico derecho	Right metal support	1	SOPOR2P2-R-8547
4		Soporte metálico izquierdo	Left metal support	1	SOPOR2P2-L-8547
5		Tornillo Allen M5x16 Ø11 ISO7380	M5x16 Ø11 ISO7380 Allen screw	2	TORNI-I7380-493
6		Tornillo Allen M5x11 Ø11 ISO7380	M5x11 Ø11 ISO7380 Allen screw	4	TORNI-AI----520
7		Arandela de nylon M5x1	M5x1 nylon washer	10	ARNV0000000245
8		Tapón tornillo M5 ISO 7380	M5 ISO7380 screw cap	6	TAPON-----85


# BMW

F750GS/F800GS ADV/F850GS/F850GS ADV/S1000XR/  
R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

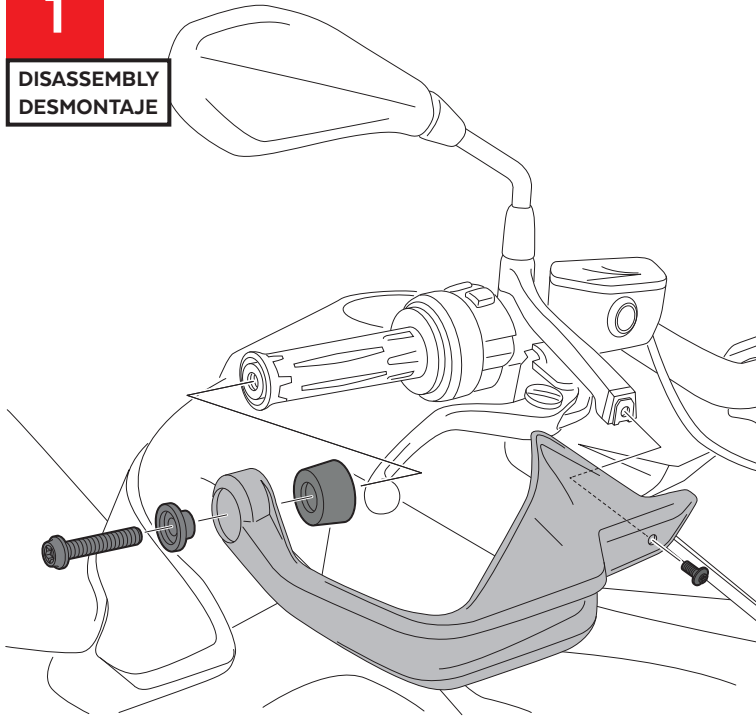


**2**

ASSEMBLY  
MONTAJE

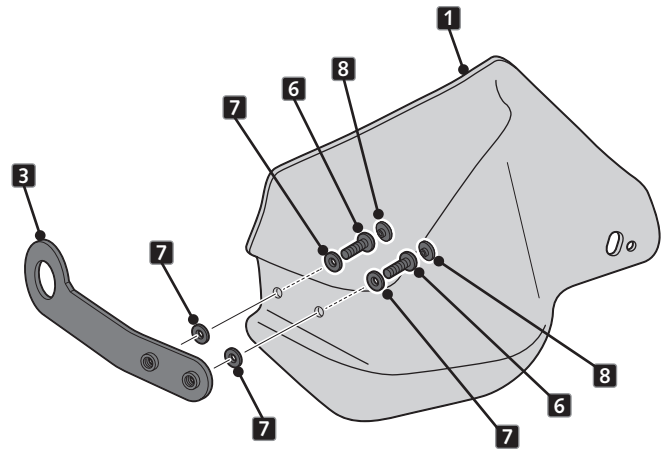

**3**


ASSEMBLY  
MONTAJE

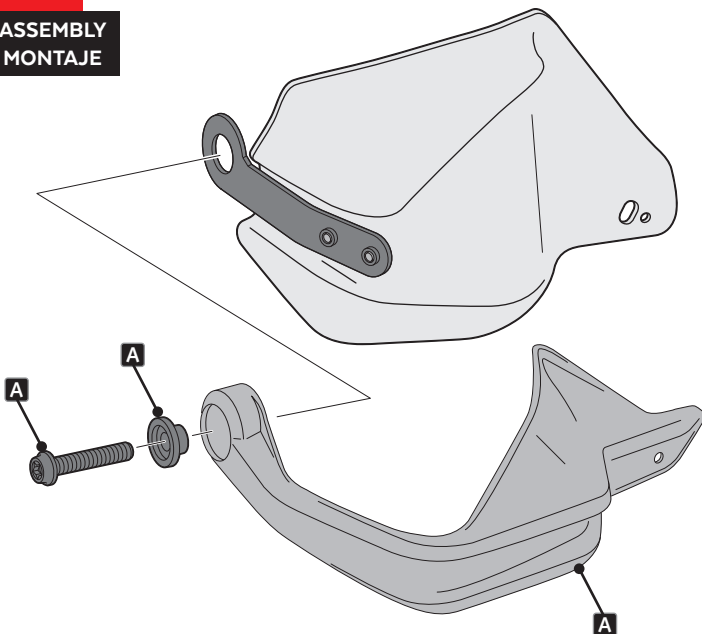

**A** PIEZA ORIGINAL  
ORIGINAL PART

**4**

ASSEMBLY  
MONTAJE

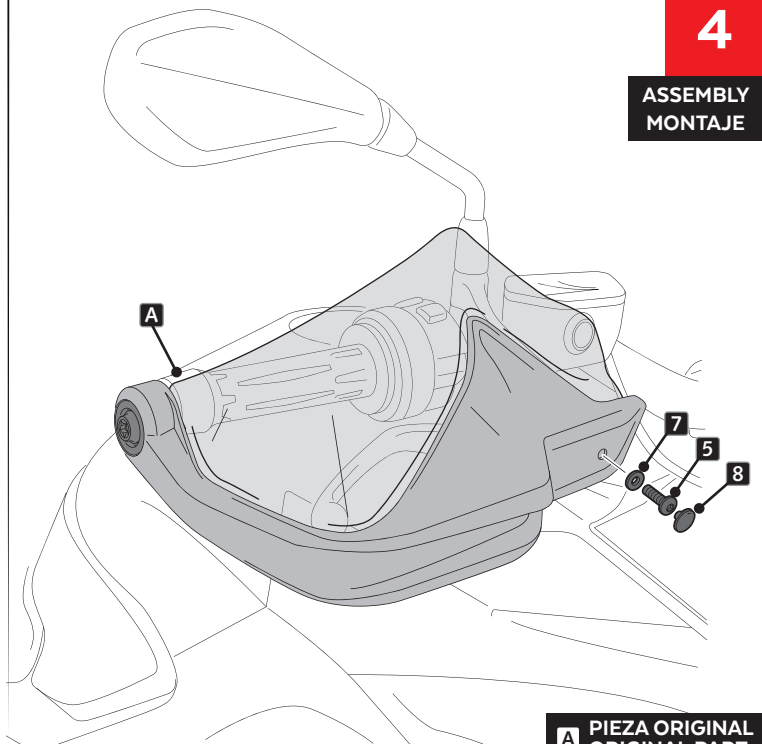

**A** PIEZA ORIGINAL  
ORIGINAL PART


# BMW

F750GS/F800GS ADV/F850GS/F850GS ADV/S1000XR/  
R1200GS/R1200GS ADV/R1250GS/R1250GS ADV

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

DISASSEMBLY  
DESMONTAJE

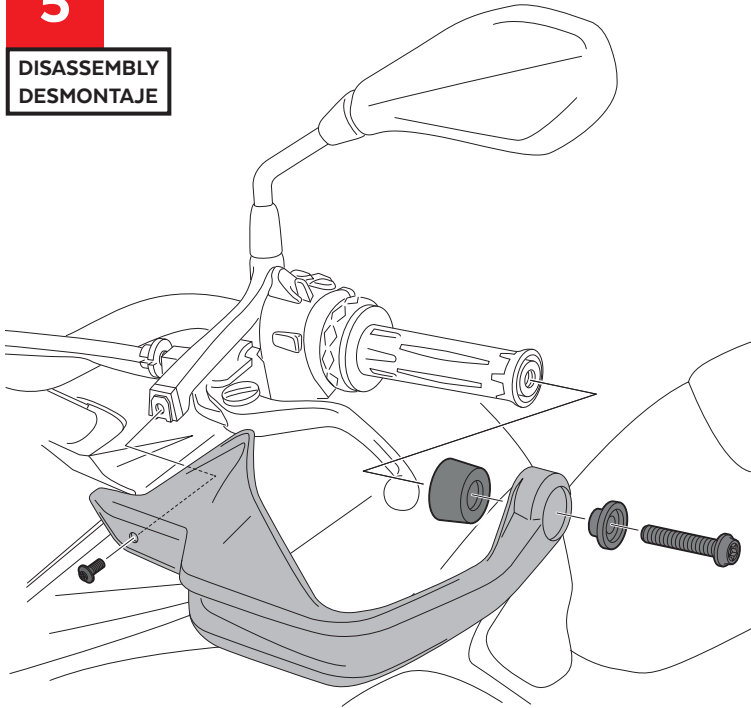


**6**

ASSEMBLY  
MONTAJE

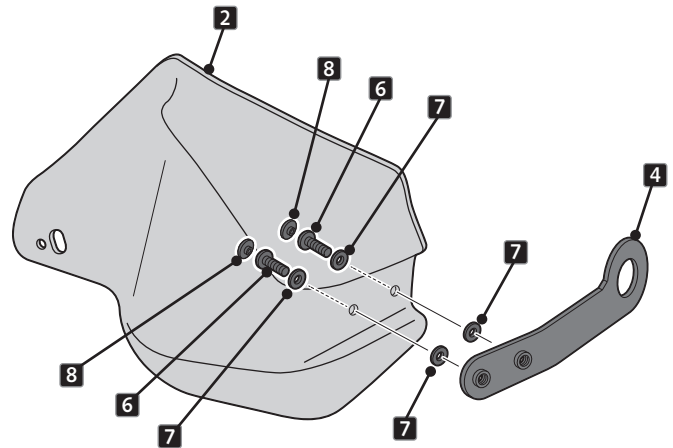

**7**


ASSEMBLY  
MONTAJE

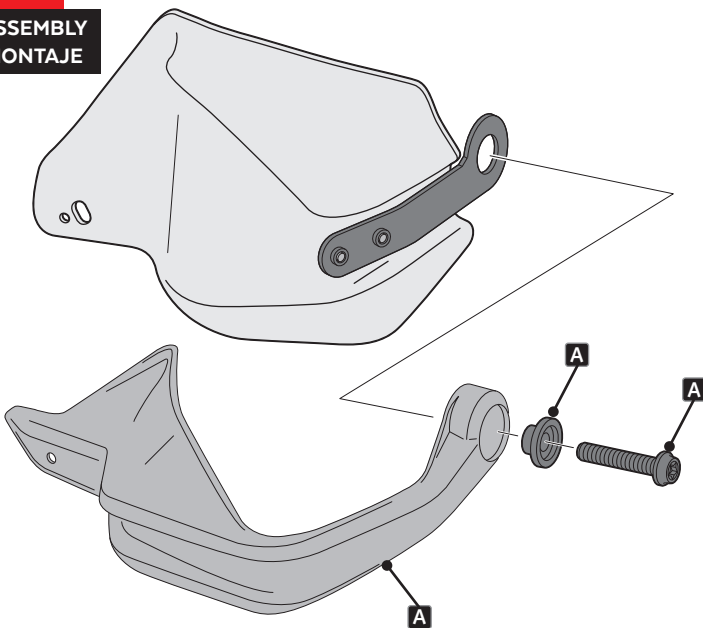

**A** PIEZA ORIGINAL  
ORIGINAL PART

**8**

ASSEMBLY  
MONTAJE

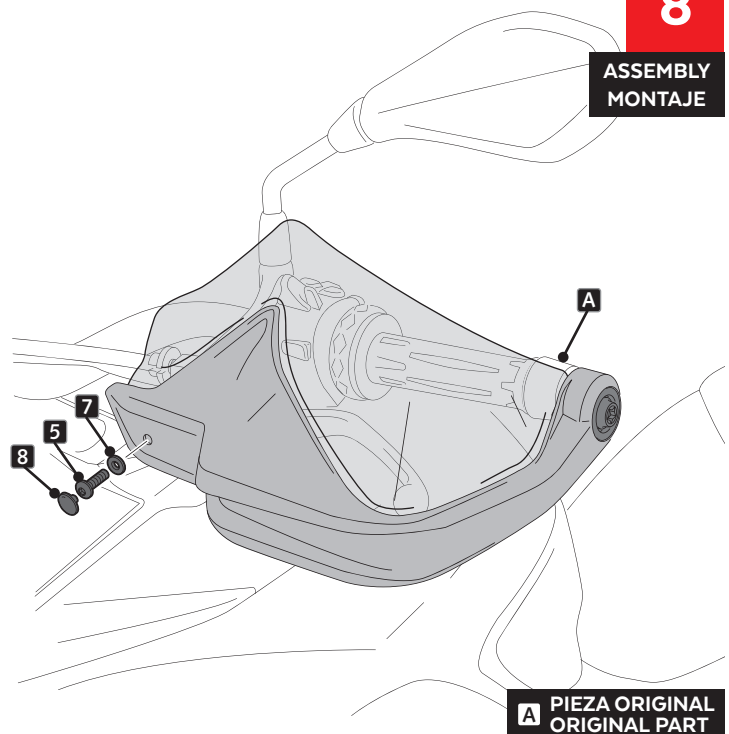

**A** PIEZA ORIGINAL  
ORIGINAL PART